


LonRock NVR P2P remote manual:


1. Right click to login NVR, right click – “IP channel setting” – “auto” to connect IP cameras:



2. Right click – “MainMenu”– “Setting”– “NetWork setting”– “P2P setting” to view ID:

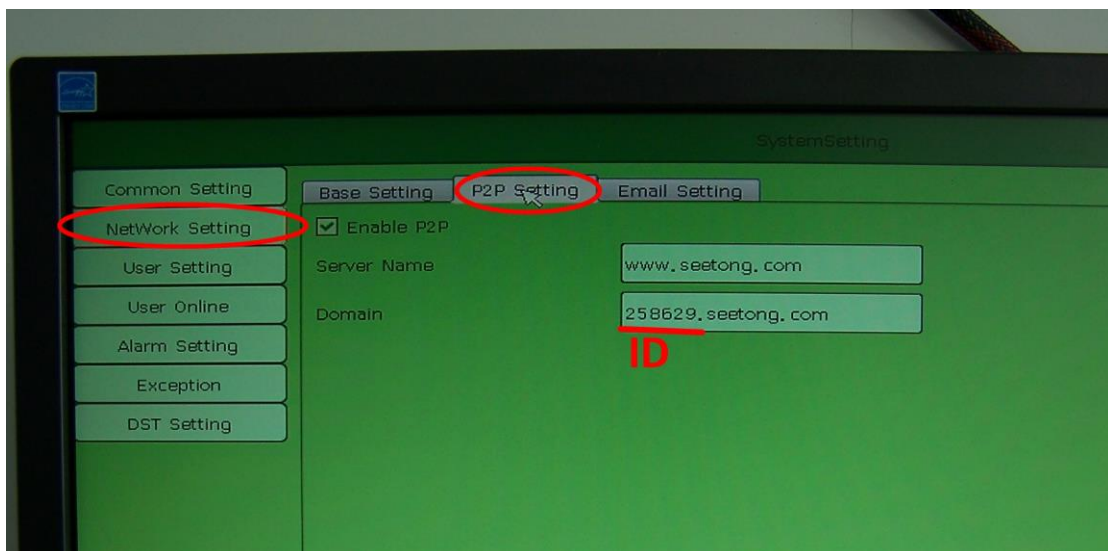

3. Install our mobile APP, input device ID 258629 – click “Login” to preview:

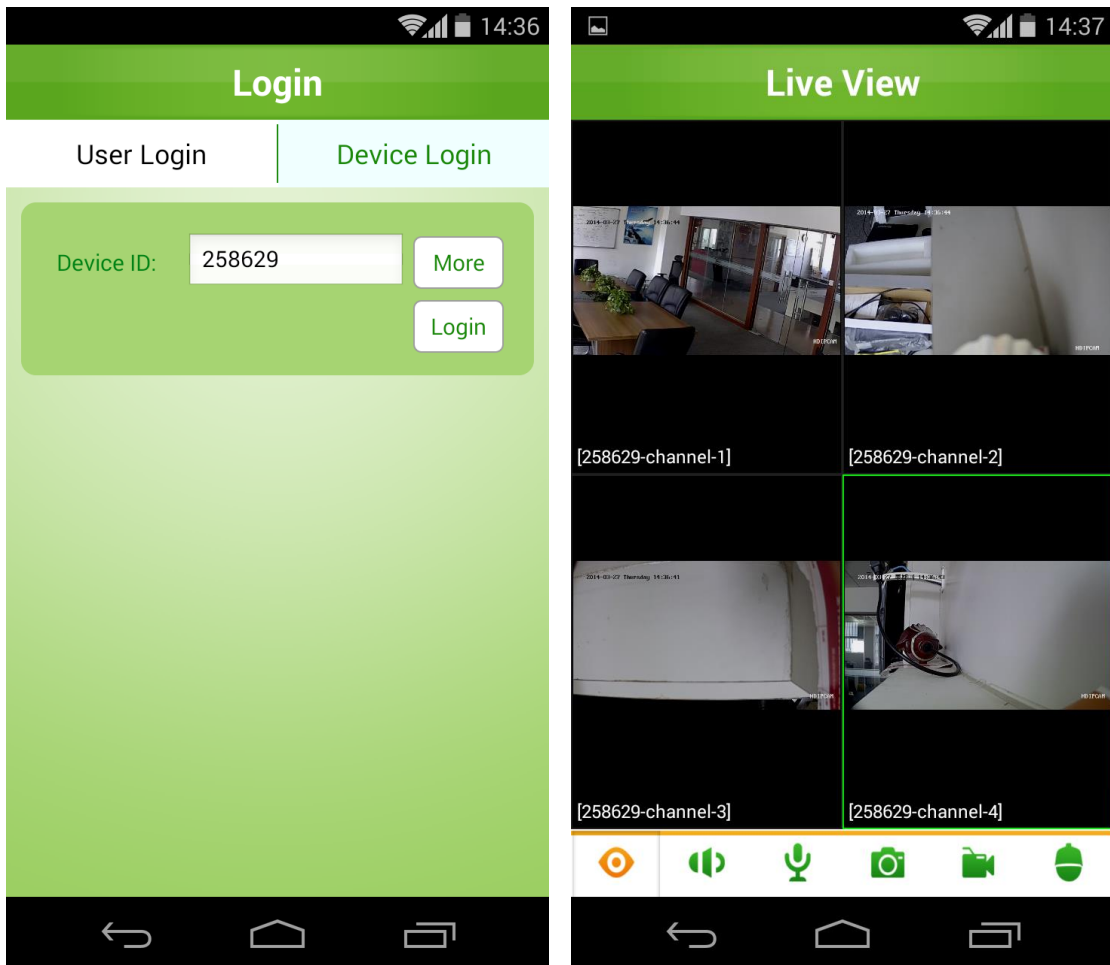

Eyes on safety anywhere without configuration..
3G/4G/Wifi network for your mobile required!